


SIGN INSTALLATION

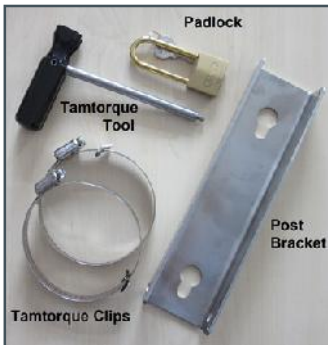

1. When installing onto an existing post, mount the post bracket at approximately 2.1m, or 2.4m on a cycle path.
2. Safely mount the sign onto the post bracket, ladders or an alternative climbing aid will be needed.
3. Ensure the sign is facing down the road, towards oncoming traffic with 80-90 metres of road ahead.
4. Secure by threading the tamtorque clips around the post and through the bracket using the tamtorque tool to tighten.
5. Attach the padlock through the post bracket to secure the sign.

A comprehensive guide to the MVAS and how to connect to the sign including the software needed can be found online at ;

<https://www.swarco.com/stl/Products-Services/Service/Support>

Training classes can also be purchased, with which you will also receive a hard copy of the comprehensive guide and Radar manual. For further information on this please contact the following.

E: office.stl@swarco.com